

NOTICE

1. This unit is NOT water proof. Do NOT expose to water, high humidity or other liquids.
2. The batteries should not be exposed to excessive heat such as sunlight, fire or the like.
3. Do NOT throw used batteries in the trash. Consumed batteries must be properly disposed of.
4. Danger of explosion if batteries are incorrectly replaced. Please make sure batteries are installed correctly.
5. This camera has no internal memory, so the SD card must be placed in the unit to have the ability to record.
6. The camera records in cycles. It saves the data in files, and after 50 minutes a new file is automatically created to keep the file sizes manageable.
7. Between saves there is a 1 – 2 second delay in which the unit will not record.
8. When the camera is running and the batteries are almost depleted the “LOW POWER” light will flash, and at this time the batteries should be changed.

SPECIFICATIONS:

| | |
|-------------------|--|
| Image Sensor: | Auto Focus - Infinite |
| Image Size: | 320 X 240 |
| Power Efficiency: | 220 mA |
| File Format: | AVI |
| Memory: | Supports 128MB - 2GB SD Card * |
| Power: | 3-AAA Batteries * - 12V Car Adaptor Included |
| Video Output: | RCA to TV Input |
| Mounting Bracket: | Dash Mount with Adjustable Angle Set Screw |
| Video: | Color |

* SD Card Not Included. Batteries Not Included.

SPY CHEST INC

202 S. Main St.
Crestview, FL 32536
Phone: (850) 683-8787
Fax: (850) 682-0083
Email: sales@spytechs.com



Car Camera Road Safety Guard

INSTRUCTIONS



TEL: (850) 683-8787

Car Camera User's Manual

Thank you for purchasing this product. We highly recommend reading this user manual in its entirety before using the product.

Car Camera Set Includes:

- Car Camera
- Car Camera Stand
- Car Power Adaptor
- Video Cable
- Mounting Set Screw
- Instructions



Installation

1. Before placing the camera mount on the dashboard of your vehicle use the mounting screw to attach the camera. Then adjust to the desired angle and tighten.
2. Place the unit on the dash and use the laser to aid in the positioning of the device. Remove the paper on the bottom of the mount to expose the adhesive and secure it to the dash.
3. Once mounted, adjust the camera's angle again, using the laser light to confirm the positions accuracy. After tightening the screw cap to secure the position, the installation is complete.

Operation

1. Provide power to the unit (2 sources)
 - A. Three AAA batteries
 - B. Cigarette lighter adapter (12V direct current)
2. Insert SD Card (Use standard SD cards only 512MB – 2GB). Make sure the selector on the side of the SD Card in the **unlocked** position.
3. Press the power switch to turn the camera on (the "Work LED" is illuminated).
4. Press the "PLAY" button to begin recording. When the button is pressed the "WORK LED" will begin flashing.
5. Press the "PLAY" button to stop recording, the "Work LED" will remain illuminated to indicate the unit is in standby and ready to begin recording.
6. To turn off the device press the power switch.

Play (Start / Stop)

Laser Button

Power (On / Off)



Video Retrieval (2 Methods):

Computer (Recommended)

1. Remove the SD card from the device.
2. Insert the card into the SD reader on your computer (if your computer does not have an SD card reader you may purchase one at http://www.spytechs.com/video_accessories/sd-card-adaptor.htm)
3. Once your computer recognizes the card a window will open in which you can select "Play using Windows Media Player" or "Open folder to view files using Windows Explorer". Either one can be used to access the information on the card.
4. The files can also be accessed by clicking on my computer, then selecting the proper removable disk.

A/V Output

1. Connect the unit to your television by using the provided cable and plugging it into the AV out plug on the device, and plugging the other end into an available video input on a television.
2. Then power on the unit and press play to view the videos.

Deleting Files

Removing or deleting files is achieved in the same manner as you would with any other file on your computer. Simply attach the SD Card to your computer. Then go to the folders / files view and select the files you wish to remove and then delete.

